

ASSEMBLY INSTRUCTIONS

PARAVENT

Scope of delivery, BASIC PARAVENT unit:

1 x basic unit (adjusting screw on the left), 1 x basic unit (adjusting screw on the right),
1 x steel foot, 1 x locking pin, 1 x lock screw

Scope of delivery, PARAVENT EXTENSION unit:

1 x extension element, 1 x steel foot, 1 x locking pin, 1 x lock screw

ASSEMBLING A TWO-SECTION PARAVENT:

- a) Position the steel foot **4** and fit the basic unit **1** onto it.
- b) Now fit the second basic unit **3** onto the screw.
- c) To connect the two sections, insert the locking pin **5** and tighten the lock screw **6**.
- d) You can compensate for minor unevenness in the subsurface and ensure that the screen is stable by turning the adjusting screws on the left and right **7** in or out.

ASSEMBLING A THREE-SECTION PARAVENT:

- a) Position the first steel foot **4** and fit the basic unit **1** onto it.
- b) Fit one side of the extension element **2** onto the first steel foot and the other side of the extension element onto the second steel foot.
- c) To connect the two sections, insert the locking pin **5** and tighten the lock screw **6**.
- d) Depending on the version, fit a second extension element or the basic unit **3** onto the second steel foot and connect these sections. Insert the locking pin and tighten the lock screw. Repeat the process to fit several extension elements. The extension elements must always be positioned between two basic units.
- e) You can compensate for minor unevenness in the subsurface and ensure that the screen is stable by turning the adjusting screws on the left and right **7** in or out.

ASSEMBLY INSTRUCTIONS

- 1 Basic unit (adjusting screw on the left)
- 2 Extension element
- 3 Basic unit (adjusting screw on the right)
- 4 Steel foot
- 5 Locking pin
- 6 Lock screw
- 7 Adjusting screw

