

Cantilever parasol 4×4 m with ground sleeve

Dimensions of foundation


60 × 60 × 50 cm (L × W × H)

Floor type


Concrete

Ready-mixed concrete (DIY store) or lean concrete. Setting time: at least 24 hours, ideally 48 hours

Gravel bed

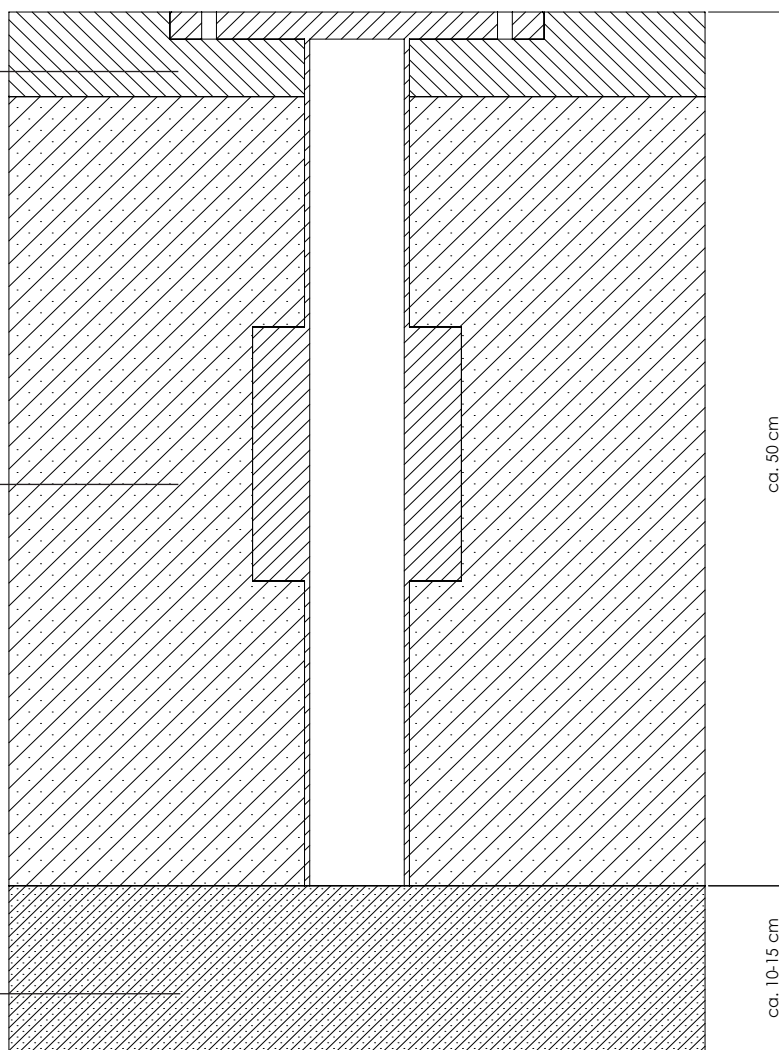

Assembly of screw-on sleeve

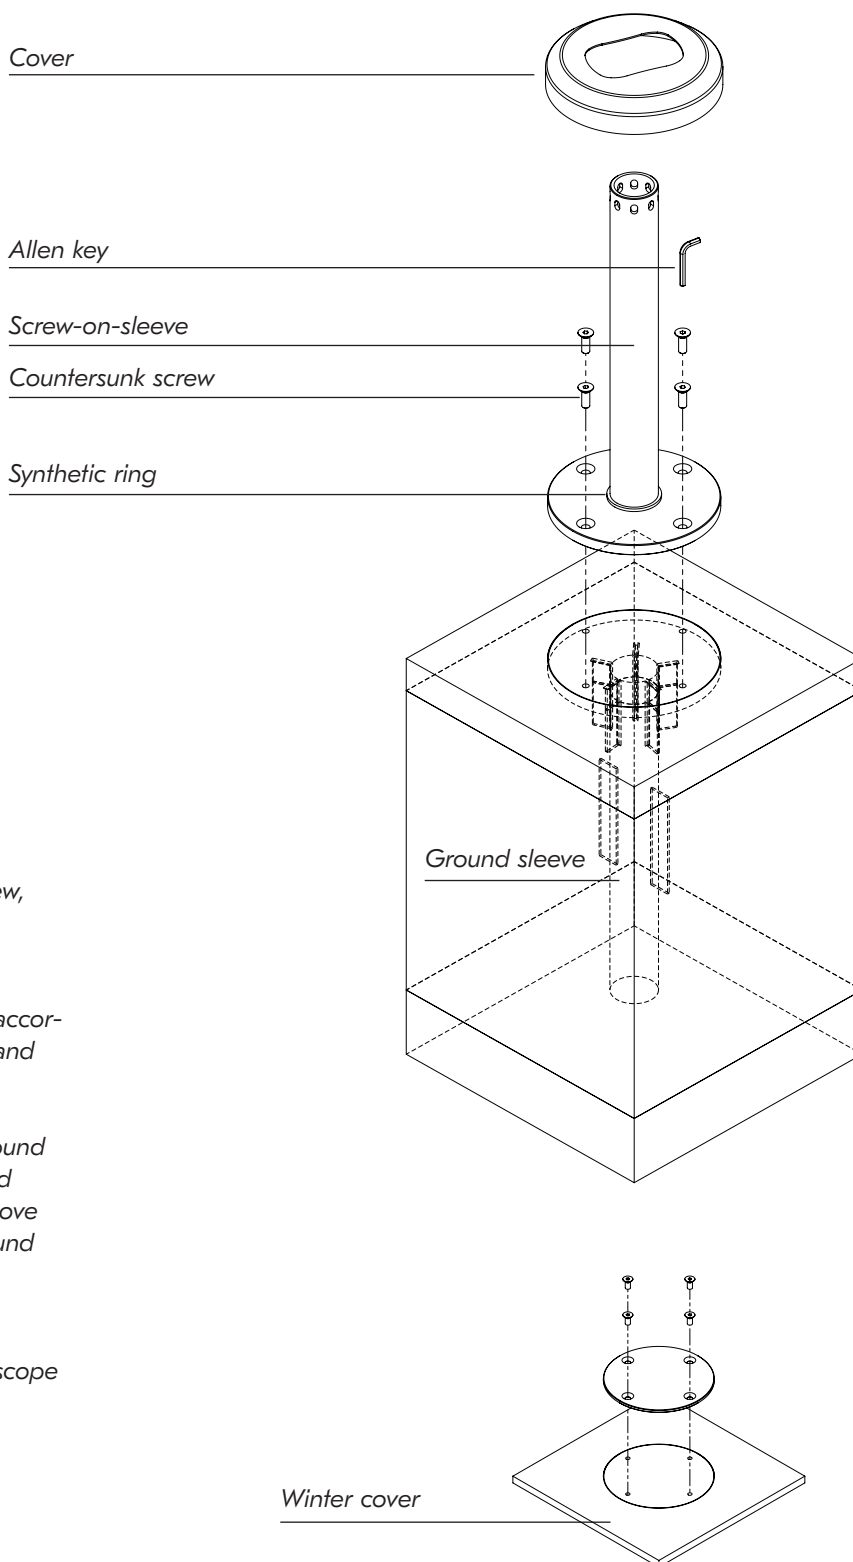

Scope of delivery of ground sleeve package

1 × ground sleeve, 4 × countersunk screw,
1 × winter cover, 1 × Allen key

Instructions


First set the ground sleeve in concrete according to the illustration and description and allow to dry sufficiently.

Screw the screw-on sleeve onto the ground sleeve using the countersunk screws and the Allen key. If necessary, you can remove the parasol in winter and close the ground sleeve with the winter cover supplied.

Note

The screw-on sleeve is included in the scope of delivery of the cantilever parasol.

Handling cantilever parasol

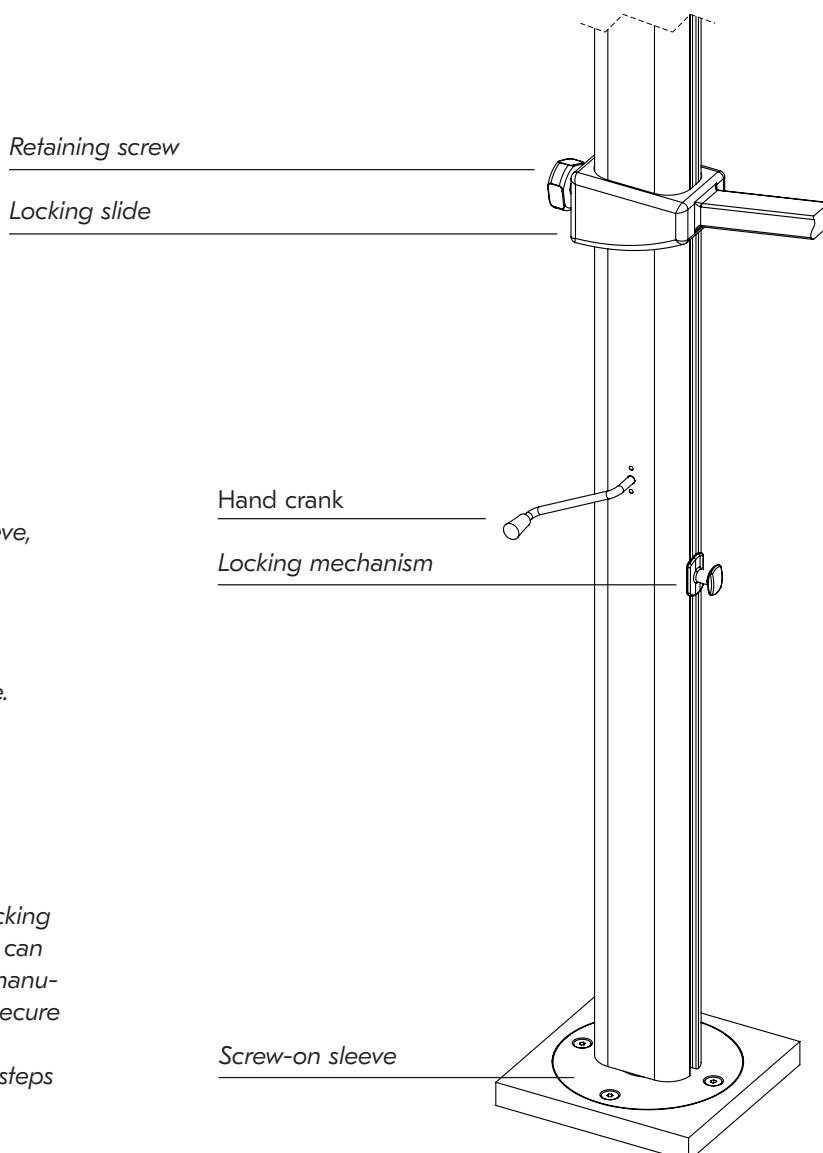

Scope of delivery of cantilever parasol package

1 × cantilever parasol, 1 × screw-on sleeve,
4 × countersunk screw, 1 × Allen key,
1 × hand crank

Assembly

Place the sunshade on the screw sleeve.
Place the crank handle on the pin and
tighten with the Allen key.

Open parasol

Slightly loosen the locking slide on the
parasol pole.
Open the covering by cranking. The locking
slide moves upwards automatically. You can
now adjust the angle of inclination by manu-
ally adjusting the locking slide. Finally, secure
the locking slide.
The parasol pole can be rotated in 45° steps
by releasing the locking mechanism.

Note

When the parasol is closed, only tie the co-
vering (without the trunk) together with the
binding straps.