



ASSEMBLY INSTRUCTIONS

CABIN CHAIR - REPLACEMENT COVER

- 1** Lay the folded Cabin Chair on its back, as shown. Using a screwdriver or cordless screwdriver, release the screws holding the seat covering in place on the frame on the left and right.
- 2** Pull the seat cover evenly out of the groove on both sides. Then remove the round wooden rods from the cover on the right and left and place them to one side.
- 3** The backrest cover is held in place by 2 screws on each side. Unscrew all these screws.
- 4** Pull the backrest cover out of the groove on both sides, remove the aluminum rails and place them to one side.
- 5** Lay the new seat cover face down in front of you and insert the round wooden rod into the stitched pockets on both sides.
- 6** Now guide the seat cover into the groove. Begin on one side, insert the cover half-way and then start inserting the other side of the cover. Fully insert the seat cover on both sides so that the front end of the cover is flush with the frame. (**7**)
- 8** Using a cordless screwdriver, pre-drill the holes on the left and right side of the round wooden rod (you will require a wood drill with diameter 2.5 mm). Now turn in the screws on both sides. The seat cover is now fixed in position again.
- 9** Insert the aluminum rails into the stitched pockets in the new backrest cover on both sides.
- 10** Turn the backrest cover so that the curved side is facing you and the reverse side is facing upward.
- 11** Insert one side of the aluminum rail into the groove as shown. Please ensure that the covering is fully inserted into the groove.
- 12** Now, using a metal drill with diameter 3 mm, drill one hole in the aluminum rails and insert and tighten with a screw (this prevents the aluminum rail from slipping), then drill the other hole and insert and tighten the second screw. Repeat on the other side of the backrest.

ASSEMBLY INSTRUCTIONS

CABIN CHAIR - REPLACEMENT COVER

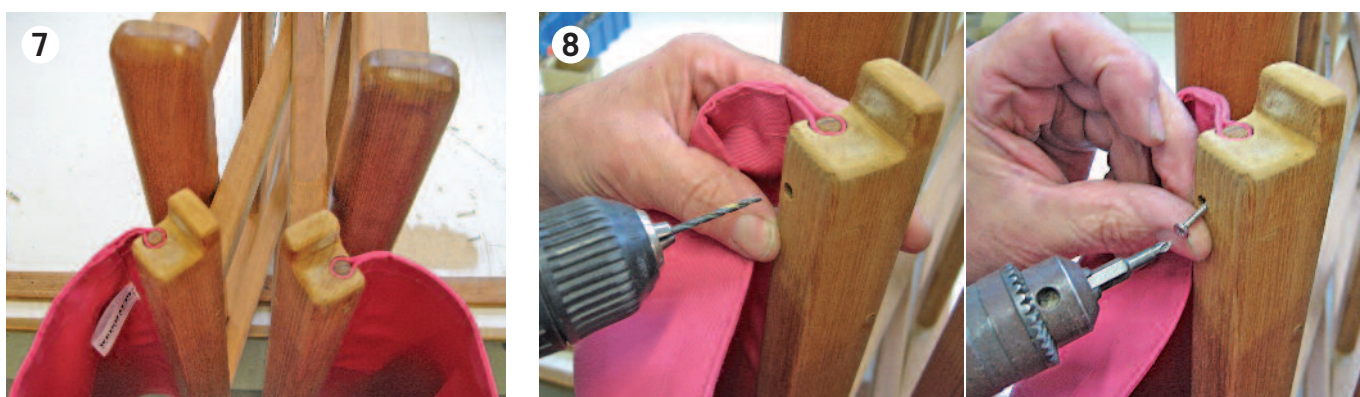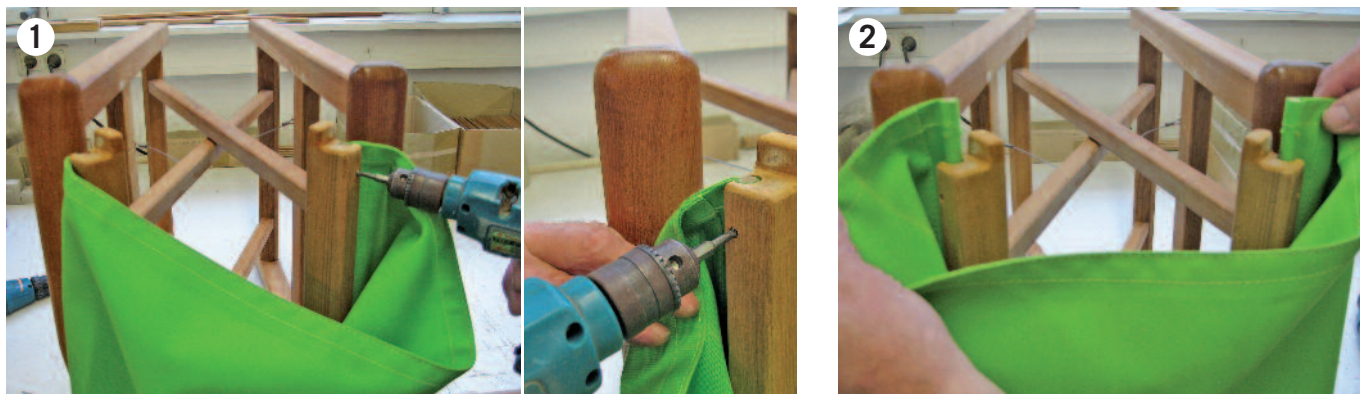

ASSEMBLY INSTRUCTIONS

CABIN CHAIR - REPLACEMENT COVER

