


ASSEMBLY INSTRUCTIONS


REPLACING THE UMBRELLA CANOPY, RECTANGULAR UMBRELLA

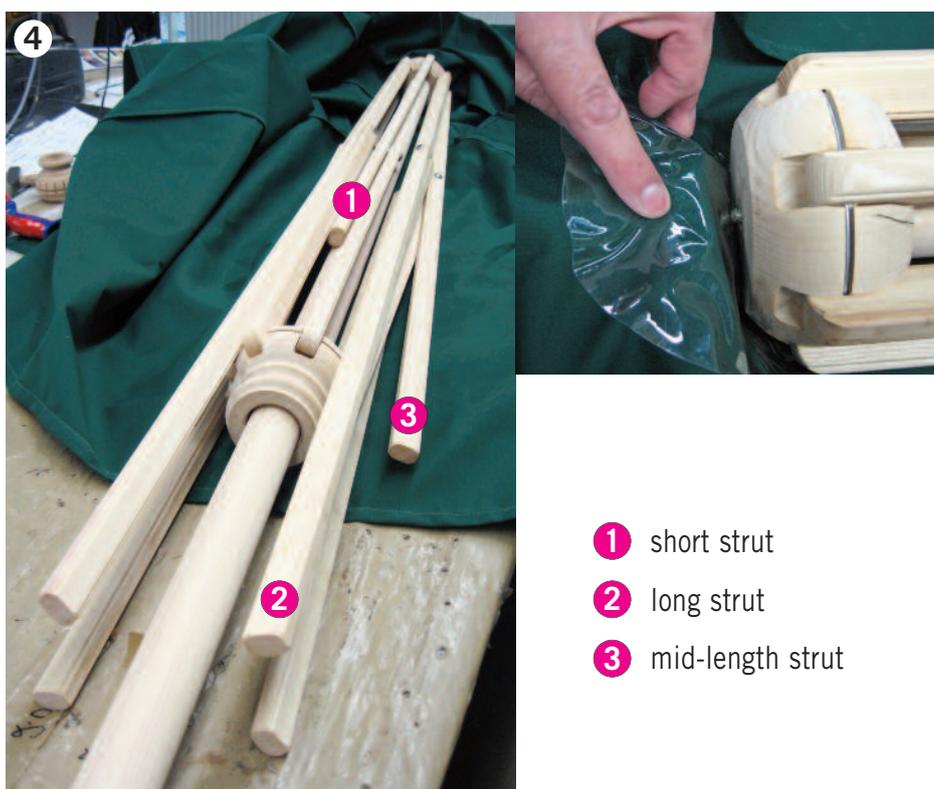


- 1 short strut
- 2 long strut
- 3 mid-length strut



Order for attaching the canopy to the struts:

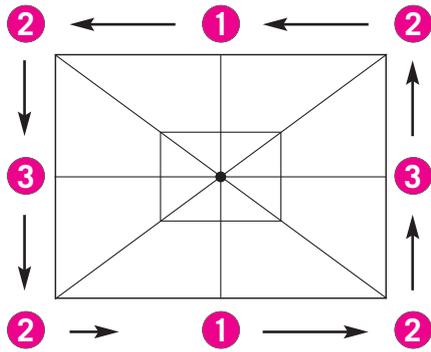

- 1** short strut
- 2** long strut
- 3** mid-length strut

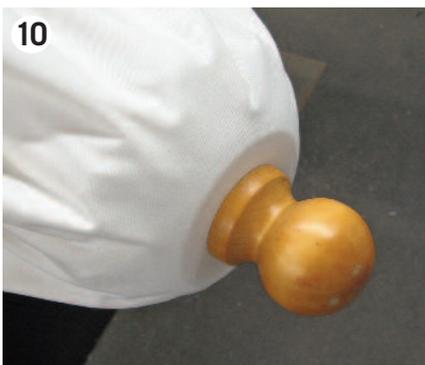

ASSEMBLY INSTRUCTIONS

REPLACING THE UMBRELLA CANOPY, RECTANGULAR UMBRELLA

- ❶ Unscrew the wooden ball from the top of the umbrella.
- ❷ Using a cordless screwdriver, remove the screws on both ends of every strut.
- ❸ Once you have released the old canopy completely from the frame, lift the frame up and remove the canopy.
- ❹ Spread the new canopy out in front of you (with the outer side facing down) and insert the frame as far as the center as shown. There is a hole in the middle of the canopy. Insert the wooden ball through this hole from the outside, fit the protective disk for the upper umbrella hub onto the shaft on the inside of the canopy and screw the ball onto the umbrella hub. Caution! Do not screw in tightly. It must remain possible to move the canopy easily. As you can see in the illustration, the rectangular umbrella has struts of three different lengths: short (1), mid-length (3) and long (2) struts.
- ❺ If you now fold the canopy back over the frame, it lies on the frame in different lengths. Ensure that the frame and the canopy are positioned so that you begin with the shortest strut and then go on to the longest strut. It may be necessary to turn the frame or the canopy until you reach this position.
Grip the reinforced point of the canopy on the side of the shortest strut (1), pull it about 1 cm beyond the end of the strut and hold it in position.
- ❻ Now pre-drill the two holes for the screws with a 2.5 mm \varnothing wood drill.
- ❼ Place one screw with collar in each hole and tighten with a cordless screwdriver.
- ❽ **Proceed in the same way for each strut, working from strut (2) to strut (8).**
- ❾ Put up the canopy until it is stretched taut. You may have to drill a new hole for the locking pin if the old bore hole no longer fits. To do this, drill a hole horizontally through the umbrella pole using a wood drill, 8.5 mm \varnothing . If you have a countersink to hand, you can use it to deburr the bore hole to improve the appearance.
- ❿ Fold the canopy and screw the wooden ball on the top tight.