
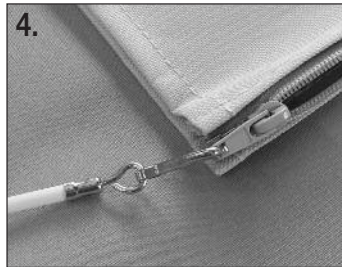


## ASSEMBLY INSTRUCTIONS

# PROTECTIVE SLEEVE WITH WAND – CANTILEVER UMBRELLA

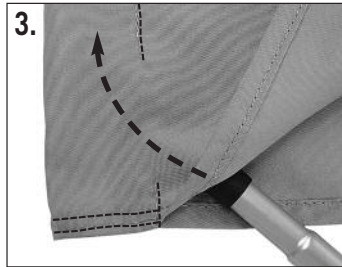

### Scope of delivery:

Rod linkage, galvanized (3 sections), 1 x protective sleeve, 1 x drapery wand

1. Fit the rod sections together so that they form one rod with the black end caps on the outer ends.
2. Now spread the protective sleeve out with the zipper on the right-hand side. It has a tunnel sewn in on the left-hand side, with an opening on the inside of the lower edge at one side.
3. Feed the rod through this opening from the inside. It must be completely inserted into the tunnel so that it can no longer slide out.
4. Hook the drapery wand into the slider of the zipper. You can now close the sleeve by pushing upward with the rod.